



FREE download for Ness Trade customers
ness.com.au/trade-downloads

NessComms


Programming software for Ness DPlus / D8x / D16x / D8XCEL / D16XCEL panels.

Fast and easy direct-connect

Direct Connect Programming



- Fast and easy installation programming
- Download system logs, including extended logs not accessible by keypad
- Database stores hundreds of clients
- Free For Trade users

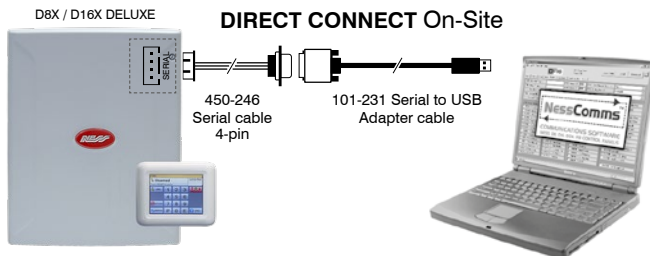


D8x/D16x Deluxe (v8 and later) uses 450-246 serial cable (4 pin)
Previous versions of D8x/D16x use 450-185 RS232 cable (3 pin)

NessComms makes on-site control panel programming as simple as ticking the boxes. Direct connect via serial port for fast and easy programming by laptop/PC.

The Ness 450-246 Serial Cable and 101-231 Serial-to-USB adapter cables are required. DPlus panel requires NessComms V6.00 or later.

ORDERING INFORMATION

xxx-xxx	NessComms Software FREE DOWNLOAD
450-246	Serial cable for DPLUS & D8/D16XCEL (4 pin)
450-185	Serial cable for D8x/D16x (3 pin)
101-231	Serial-to-USB Adapter Cable

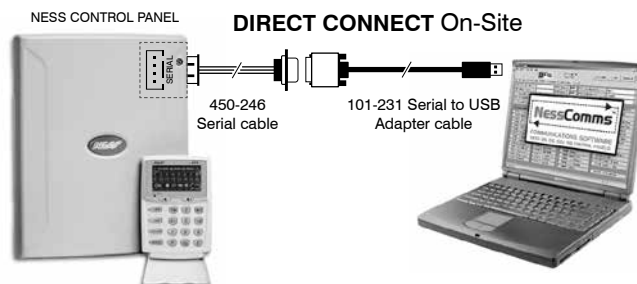

Note:

DPlus and D8/D16XCEL require 450-246 serial cable (4 pin)
 Previous versions of D8x/D16x use 450-185 RS232 cable (3 pin)



NESSCOMMS

Programming & operation software for PC

- Fast and easy installation programming
- Live zone status mode
- Download system logs, including extended logs not accessible by keypad - up to 80 events
- Database stores hundreds of clients
- Free For Trade users

NessComms makes on-site control panel programming as simple as ticking the boxes.

Direct connect via serial port for fast and easy programming by laptop/PC. The Ness 450-246 Serial Cable and 101-231 Serial-to-USB adapter cables are required.

DPlus requires NessComms V6.00 or later.