



# Premium Cordless Power Brush System



VAC-419  
Cordless  
Power Brush



VAC-422  
Charger



VAC-421  
Power Wand -  
battery pack and  
telescopic wand

**EBK250**

**USER MANUAL**

This manual covers the operation of:  
VAC-419 EBK250 Cordless Electric Turbo Brush  
VAC-421 Power Tube Battery Pack & Telescopic Wand  
VAC-422 Battery Charger for Power Tube

All items are available for purchase separately or as part of K-VAC-419 kit



This device complies with the following EG directives:

- 2014/35/EU – Low Voltage Directive
- 2014/30/EU – EMC directive
- 2011/65/EG – RoHS directive

## **Attention!**

Do not use the device without  
having read the instructions for use

### **Intended use**

This electric brush attachment and battery wand is designed for household use in the cleaning of dry floors. This includes carpeting, area rugs as well as hard floor surfaces such as wood, ceramic tile, vinyl tile etc. This product is not design to pick up liquids or damp debris.

The device should not be used to vacuum or brush living beings.

The device must not be used to vacuum flammable liquids, gases and dusts such as perfume, aftershave, cleaning agents, coal dust, ash etc.

The device may only be used in combination with a vacuum cleaner provided for this purpose. For details, please refer to the instructions for use of the respective vacuum cleaner.

Intended use also includes following these instructions for use.

## ATTENTION!

- This device is **not suitable** for the recovery of hazardous dust.
- This device is intended for **dry use only** and must not be used or stored outdoors in wet conditions.
- Use only original manufacturer's parts. Use of non-original manufacturer's parts can affect safety and void any warranties.
- Do not use this power telescopic wand for any other purpose.

## Safety Instructions

- Read and follow these instructions before using this product, as well as the instructions for your vacuum cleaner. This knowledge will protect yourself and prevent damage to the device and floors being cleaned.
- The device complies with the relevant safety regulations. Repairs may only be carried out by experienced small appliance repair professionals. Improper repairs can pose significant risks to the user.
- Disconnect the device from the power source when servicing.
- Do not bring loose clothing, hair, fingers or such near the device openings. Do not reach into the running brush roller, injury could occur.
- Do not leave the connected device unattended.
- Use of this product is not recommended for children under age 8. Use of this product is only recommended after training and under supervision by children 8 years of age and older, persons with reduced physical, sensory or mental abilities. These users must be trained in the safe use of the product and understand the potential dangers when the product is not used as recommended. Children must not play with the device. Cleaning and user maintenance must not be carried out by children without supervision.
- Do not allow the device to come into contact with water.
- Do not vacuum up liquids or damp dirt with the electric brush. Use in these conditions can also lead to considerable malfunctions on the vacuum cleaner. Use in this way can also affect protection against electric shock. This also applies to freshly shampooed or spray-extracted carpets or upholstered furniture.
- Liquids and cleaning agents should not come into contact/seep into with openings of the electric brush. This can damage the electronics and the electric motor.
- Flammable liquids, gases and dusts, such as perfume, aftershave, cleaning agents, coal dust etc., can explode when vacuumed and cause injuries.
- Do not vacuum up glowing ash or charcoal, as this can cause the electric brush and the vacuum cleaner to catch fire.

# POWER BRUSH



← Wand release button

← Headlight

← Brush release - twist to remove the brush for easy cleaning.  
Hair and lint can be cut away with scissors taking care not to cut the roller brushes.

# POWER WAND



## \* On/Off Switch Operation

- Short Press to display battery charge level.
- Long Press to turn on or off.



Click into the power brush

- Do not vacuum up heavy, hard or sharp-edged objects. You could block and damage the electric brush.
- Don't operate the electric brush over exposed cables.
- The electrical connector must be checked regularly for damage. If there is any damage, the electrical connection piece must be replaced immediately by a qualified small appliance repair professional.

## **Assembly and Connection to the Vacuum**

Only operate this electric brush with the corresponding battery wand. The integrated electrical connection system will automatically couple when attached to the PowerWand.

There is an automatic locking mechanism at the bottom of the PowerWand. Press the release mechanism to disconnect the Powerwand from the powerhead. The switch to turn the electric brush on / off is located at the top of the Powerwand.

### **Please Note:**

There is a delay when turning the brush on and off. The operator must **PRESS AND HOLD** the button to turn the brush on and off.

## Charging

Shipping a fully charged Lithium-Ion Battery is prohibited. A new battery just 'out of the box' will only have a partial charge. To ensure a full battery charge, completely charge the battery before using.

It is always best to disconnect the charger from the battery after full charge has been achieved.

Recharge only by the original charger model VAC-422

## Operation

Press on the on/off button quickly to activate the status display for 10 seconds.

**Press and Hold** the on/off button (> 2 seconds) to activate the display and power-up the powerbrush. During operation the display shows the actual status of battery.

**Press and Hold** the on/off button (> 0.5 seconds) to power off the powerbrush.

## 3 YEAR WARRANTY



REGISTER YOUR WARRANTY



SALES - SERVICE - SPARES  
PH 1300 551 991  
[www.valet.com.au](http://www.valet.com.au)