



# XBK100

## SWIVEL BRACKET FOR DETECTORS


### INSTALLATION

1. Choose the most suitable anchor-screw holes [A].
2. Mark the screw hole positions of the base [B] using the drill jigs shown below.
3. Loosen the locking screw [C] of the bracket.




#### Note:

If you want to use the central extra hole [D] remove the locking screw and the base completely.

4. Remove the screw-protection caps [E].
5. Pull the wires through the wire entries [F].
6. Using the screws, secure the base in position.
7. Swing the detector holder [G] into the required position.
8. Fasten the locking screw to secure the bracket.
9. Mount the detector using the appropriate screw holes [H].

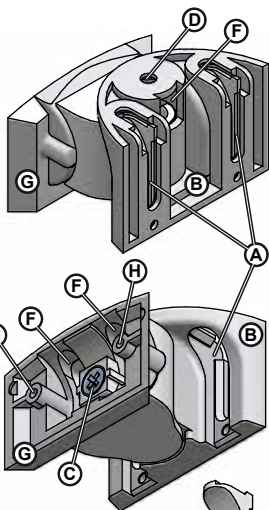

### ARCHING

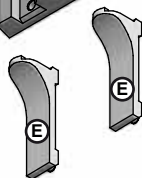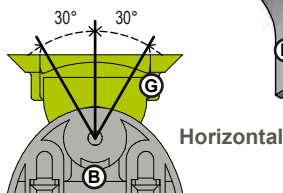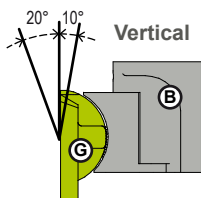

### DRILL JIG



Scale 1:1

